

Range/Oven 6 Burner, Propane

Cleaning & Inspection:

- Remove grill grates and clean with warm & soapy water
- Clean outside of unit with stainless steel cleaner
- Clean oven with warm & soapy water. Do NOT use abrasive chemicals
- Clean oven racks using warm & soapy water. Do NOT use abrasive chemical
- Aluminum foil on drip pan
- Check wheels for good rolling condition. Wheel do NOT lock
- Check hose assembly and regulator for condition. Coil hose so that it does not drag and get damaged
- Install (2) racks inside oven
- Test unit: Hook up propane and light the oven pilot light. Ensure oven heats. Light each of the (6) stove burners
- Attach operating instructions to unit
- Attach Ready to Rent tag
- CORT sticker on back of unit



Oven vent

Removable panel to light oven pilot light

Storage:

- Clean, dry and tagged unit stored in cooking aisle
- Bin location: TBD

Specs:

- Delivery Item ONLY
- 36"W x 30"D x 36"H
- (6) 24k BTU burners
- Oven is 30k BTU
- Wheel do NOT lock
- Requires 10 gallon propane tank
- (2) adjustable oven racks
- Stove top and Oven operate separately. You do not have to light the oven pilot light for the stove to work

Transportation & Handling:

- Roll unit onto truck. Wheels do NOT lock
- Protect the hose assembly/regulator during transportation. Ensure that hose does not drag
- Cover unit with moving blanket
- Ensure that oven vent (on back of unit) is not crushed during transportation
- Additional items may be stacked on top of stove
- On Delivery: Remove Ready to Rent tag
- On Delivery: Test unit. Hook up propane tank, light pilot light, light (6) burners, ensure oven starts to warm. Turn off unit and unhook propane
- On Pickup: Open oven door; check for any equipment still inside oven
- On Pickup: Attach Ready to Rent/Repair tag with driver name, date and contract number
- On Pickup: Notate any visible damage to unit on Ready to Rent/Repair tag and on driver pickup paperwork
- Load onto truck
- Off-Load: Off load to Warehouse wash pit for servicing

Range/Oven 6 Burner, Propane

Operation:

NOTE: The stove top and oven can be used independently. If you only need the stove top- you do not need to light the oven pilot light

- Install propane tank. Regulator must thread properly for unit to work
- Be sure all knobs on the stove/oven are in the OFF position
- Open propane valve

To Light Oven Pilot Light:

- Remove bottom/front cover to expose oven pilot light button
- Open oven door; while holding the red button, insert lit stick lighter flame into the pilot light hole on the bottom of the oven
- Once the pilot is lit, continue to hold in the red button for approximately 30-40 seconds
- Release the button
- If the pilot did not light: repeat above steps. It may be easier to remove bottom oven panel to expose the pilot light. With the pilot lit, close oven door
- Oven will then be ready to use. Adjust temperature of oven with control knob

To Light Stove Top:

- Open propane valve
- Proceed to light the pilot light of each burner by placing a lit stick lighter in the center of burner and turning the control knob slowly on
- Continue to light all (6) burners. Each burner has its own pilot light
- Stove will then be ready to use
- Turn the control knobs to adjust flame to desired temperature
- To turn off: switch all knobs to the off position and disconnect the propane

NOTE: Do NOT block the oven vent on back of unit. Keep combustible items away from unit.

Troubleshooting:

- Oven does not get hot

Check regulator/hose for proper connection

Pilot light is not lit. Relight pilot light

Propane tank is empty

Temperature control knob is not turned up high enough

Purge all air within the unit for at least 5 minutes;

Remove inside bottom oven panel exposing the pilot light; Relight pilot light

- Pilot light will not stay lit

